



## ESD WRIST BAND TESTER

**TEAM  
ANTISTAT**  
www.antistat.co.uk



This wristband tester has been designed to measure both high and low fail and pass functions. It also has a low battery indicator to indicate battery replacement.

Testing of your wristband is achieved by placing the jackplug into the socket and wearing the wristband - touch the touchplate and the status of the wristband will be shown.

### Specifications

Lower limit :	750k +/-10%
Upper limit :	35meg +/-10%
Power :	9 volt alkaline battery
Dimensions :	129X63X25MM



### PART:

PART: 093-0019

### Packing

1 x Wrist Band tester Unit

1 x Wall Mount

1 x Foot Plate

2 x Earth Leads

### Product Data Sheet